
AUTO-TIP CHANGER CUM DRESSER For Robot Welding Guns



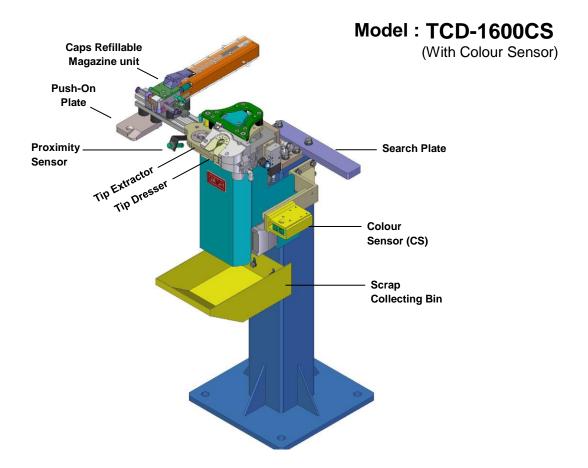

After the welding tips are worn out, **Auto tip Changing cum Dresser with Sensor** will automatically perform as under –

- Robot will go to Extractor station where tips will be automatically removed from electrode shanks and dumped into discard tray.
- Robot gun will pick Top & Bottom cap-tips automatically from magazine pre-loaded with caps.
- Robot will go to the Dressing station to dress both caps simultaneously.
 After dressing, Robot will move to the Colour-Sensor Station to check proper dressing of Cap-tips and will start welding operation. The whole operation will take just 50 seconds as against 7 to 10 minutes by Manual operation.

Above all, it provides total safety as being fully automatic operation there is no need to go inside the Robotic cell.

Delivery Scope -

Auto Tip Changer cum Dresser consists of,

- 1. Extractor for used tips,
- 2. Reloading new caps station,
- 3. Motorised auto dressing unit,
- 4. Proximity switch for monitoring caps,
- 5. Caps refillable magazine unit,
- 6. Cap push-on plate,
- 7. Colour Sensor (CS),
- 8. Rigid stand.